

WELCOME TO THE DAVINCI FAMILY!

CLEAN FIRST® TECHNOLOGY

DaVinci promises to build with only the cleanest componentry. No metals or plastics are used in our sealed zirconia/glass airpath, providing purity to the connoisseur.



KNOW YOUR IQ3

- 1 Top Lid / Zirconia Mouthpiece
- 2 Zirconia Flavor Chamber
- 3 Zirconia Cool Core Vapor Path
- 4 21700 Battery
- 5 On board Pick Tool
- 6 LED Display
- 7 Control Button
- 8 Up / Down Navigation Buttons
- 9 Bottom Lid / Air Dial™
- 10 Zirconia “Pearl” Adjustable Spacer
- 11 Glass Lined Ceramic Oven



WHAT'S IN THE BOX

| | | | |
|-----------|-------------------------------------|-----------|---|
| 1x | DaVinci IQ3 | 1x | Stainless Steel Handled Brush |
| 1x | 21700 Battery | 1x | Stainless Steel Dosage Pod |
| 1x | Zirconia Mouthpiece | 1x | Extract Kit |
| 1x | Zirconia 10mm Water Tool Adapter | 3x | Alcohol Cleaning Wipes |
| 1x | Zirconia Cool Core | 2x | DaVinci Stickers |
| 1x | Zirconia Flavor Chamber | 1x | Owner's Manual |
| 1x | 6-Ft Type C Charging Cable | 1x | Customer Support & Registration Card |
| 1x | Extra Pick Tool | | |

GETTING STARTED

Open the IQ3's bottom lid to reveal the glass-lined ceramic oven. Pack herbs tightly for maximum vapor.

Close the bottom lid to allow the pearl to pack the herb firmly.



POWER ON/OFF ●x5

Power IQ3 on/off by clicking the control button 5x.

The battery level will be displayed upon startup.

The device will vibrate when the target temperature is reached.

IQ3 starts in Smart Path 3 by default.




SMART PATH™ MODE ▼▲

Smart Paths are preset temperature experiences that gradually increase the temperature over an 8-minute session.

Cycle through Smart Paths by pressing the up or down buttons.

SMART PATH 4 – REST

Start temp 410°F / 210°C



End temp 430°F / 221°C

SMART PATH 3 – BODY



Start temp 390°F / 199°C



End temp 410°F / 210°C



SMART PATH 2 – MIND

Start temp 370°F / 188°C



End temp 390°F / 199°C



SMART PATH 1 – FLAVOR

Start temp 350°F / 176°C



End temp 370°F / 188°C



IQ3 shown in Smart Path 3

PRECISION MODE ● x1, ▼▲

To activate Precision Temperature Mode, click the Control Button 1x, then quickly adjust using the up/down buttons to set your preferred temperature.

DaVinci heats to within +/- 1° of accuracy so that the user may extract active compounds at their precise boiling point.

Helpful Tips

- The current temperature will be displayed when the Control Button is clicked 1x.
- The temperature will revert to the previous setting if the up/down buttons are not clicked.
- To switch between Smart Path Mode & Precision Mode, click the Control Button 1x.



AIR DIAL

Turn the Air Dial to adjust airflow and draw resistance.

VAPOR COOLING & DRAW RESISTANCE

IQ3 continues to offer a customized XL variable airflow experience.

Increasing the airflow on the IQ3 will allow for cooler, less dense vapor. Decreasing the airflow will allow for a denser vapor experience.



BOOST MODE

Press and hold the Control Button to quickly boost your temperature to 430°F (221°C). Release the button to stop heating.

The Control Button will turn red during this function.



IQ3 shown in Boost Mode

STANDBY MODE

From Boost Mode, release the Control Button to engage Standby Mode. This will cool down your IQ3, conserving your material and battery life.

Press the Up/Down Button to return to the previous temperature.

After 2 minutes in standby mode, your IQ3 will power down.



IQ3 shown in Standby Mode

STEALTH MODE x1

IQ3 offers Stealth Mode to control the LED display to your liking.



To adjust the LED display to full brightness, click the Control & Up Button together 1x.



To dim the LED display, click the Control & Down Button together 1x.



IQ3 shown in Stealth Mode

°F|°C TOGGLE DISPLAY x1

Toggle between Fahrenheit and Celsius by clicking all three buttons at once, 1x.



IQ3 shown in Fahrenheit (F)

TEMPERATURE CHECK ● x1

In order to check your IQ3's temperature, click the Control Button 1x.



IQ3 showing Temperature at 375°

BLUETOOTH FUNCTION x5

The Bluetooth function allows connectivity with the DaVinci mobile app. To turn on/off the Bluetooth signal directly from the device, press the up and down navigation buttons together 5x within 4 seconds.

The Control Button will flash blue 3 times when the Bluetooth signal is turned on and flash red 3 times when the Bluetooth signal is turned off, in addition to the display's LED indication.

Disconnecting Bluetooth when not in use will save battery life. Bluetooth will automatically disconnect from the device when less than 10% of the battery capacity remains.

IQ3 showing Bluetooth ON



DAVINCI APP

Craft your own experience with the DaVinci app.

1. Create a profile
2. Choose your device
3. Discover personalization features
4. Track & control your dosage

Download the app at:

davincivaporizer.com/pages/davinci-mobile-app



9:41



DASHBOARD



Session

History


Strain: Orange Dreams

Last Draw

Duration: 4s

THC: 6 mg

CBD: 5 mg

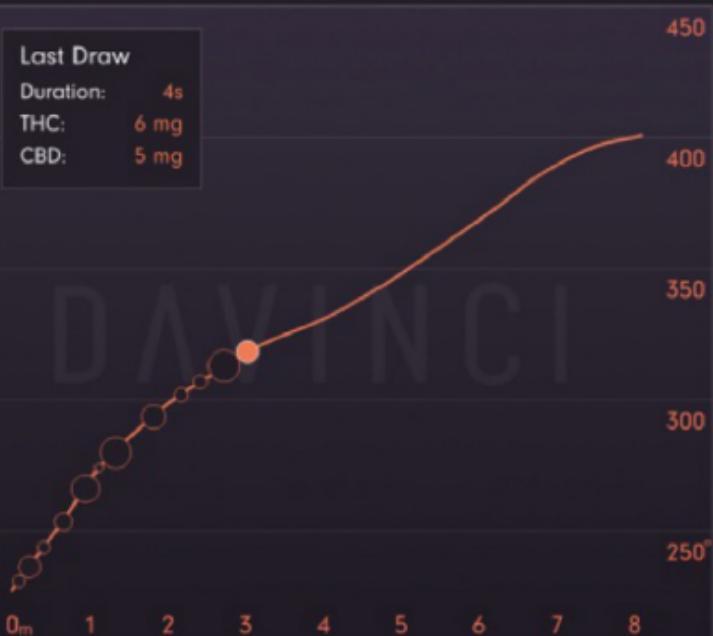

DOSAGE CALCULATION

The DaVinci IQ3 algorithm considers the potency and the amount of dry herb in the oven. The quantity of active compounds released by the IQ3 is measured per draw and cumulatively per session.

Dosage varies by the temperature used, the length of your draw, pauses between draws and the length of time the herbs have already been under heat.

Dosage draws are measured up to 12 seconds each.

Dosage calculations are based on user input and standard user behavior. Actual measurement of compounds released may vary.

Dosage Setup

To calculate dose, please enter the strain information for your dry herb or concentrate. [More Info](#)

Strain Name

Strain Type

THC %

CBD %

Target THC

Target CBD

IN APP DOSE CONTROL

Track and record the calculation of active compounds produced per draw and session via mobile app.

On the app, follow the prompts to connect your IQ3, then input your strain information and amount of dry herb in your oven.

Add a maximum dose per session and your IQ3 will alert you when you have reached your desired dose both within the app and on the LED screen of your IQ3.

Session Complete

Target THC Reached

Strain Orange Dreams

Time 6:40

Temperature 300°

THC Dosage 70

CBD Dosage 30

Rate Your Session



ON DEVICE DOSAGE

1. **Activate:** Click the control button 2x within the first 2 minutes of turning on your IQ3.



2. **Session Selection:**

- Freshly Packed Oven - If you have a freshly packed oven, click the control button 1x to confirm "NEW".
- 2nd Oven - If your oven is on its 2nd session, use the navigation buttons to select "2ND" and click the control button 1x to confirm.



3. THC Potency: The LED display will flash “THC” once, then begin flashing a numerical value.

- New to On Device Dosage - If this is your first time setting up On Device Dosage, the preset value will be 20.
- Previously used On Device Dosage - If you have previously used On Device Dosage, your IQ3 will remember your last session's THC levels.

Use the navigation buttons to select your THC percentage level and click the control button 1x to confirm. If the THC value is “0”, the device will not calculate THC.

***High concentrate THC settings only calculate for 1 run while dry herb calculates for two.**



ON DEVICE DOSAGE

4.CBD Potency: The LED display will flash CBD once, then flash a numerical value.

- New to On Device Dosage - If this is your first time setting up On Device Dosage, the preset value will be 0.0.
- Previously used On Device Dosage - If you have previously used On Device Dosage, your IQ3 will remember your last session's CBD levels.

Use the navigation buttons to select your CBD percentage level (if none or unknown, select 0.0) and click the control button 1x to confirm. If the CBD potency value is 0.0 the device will not calculate CBD.



5. Amount Loaded: The LED display will flash an oven.

- THC > 50 - If you have chosen a THC potency GREATER than 50, a small oven will be displayed to indicate use of concentrate.
- THC < 50 - If you have chosen a THC potency LOWER than 50, a large oven will be displayed to indicate use of dry herb.




Use the navigation buttons to select the loaded amount in your oven and click the control button 1x to confirm. See the next page for oven capacity.

OVEN CAPACITY



DRY HERB

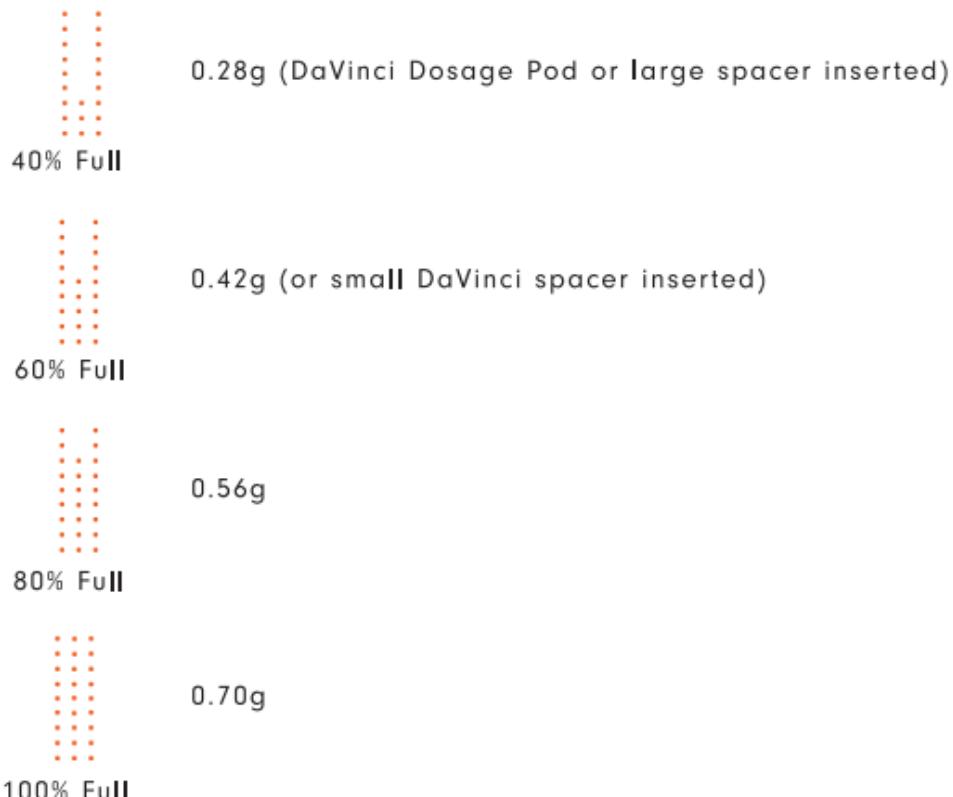

💧 EXTRACT

 0.025g
~0.5 grain of rice
25% Full

 0.050g
~1 grain of rice
50% Full

 0.075g
~1.5 grain of rice
75% Full

 0.100g
~2 grains of rice
100% Full

ON DEVICE DOSAGE

Helpful Tips

- Cancel at any time during the input process by clicking the Control Button 2x.
- If your active compound levels have been depleted to a negligible amount during your session, your device will no longer display dosage per draw.
- The device calculates active compounds per draw and cumulatively at the end of each session. When powering down your IQ3, the LEDs will flash the total dosage for your session.

FACTORY RESET



While the device is turned off,
press all 3 buttons and hold for 10
seconds until the device vibrates.



BATTERY LIFE x1

To check the battery life, click the up and down buttons together 1x.

LED Battery Code:

5 Lights | ~100% Battery

3 Lights | ~50% Battery

1 Light | ~10% Battery

Your IQ3 will vibrate when a 10% battery remains.

IQ3 showing fully charged



CHARGING

When the battery is still in the device, use the provided USB Type-C cable to charge the unit.

The device charges at 2A.

IQ3 is equipped with pass-through charging and can be used while charging. Pass-through charging may be paused to protect the device from overheating.



Charge time: Approximately 3 hours

BATTERY REMOVAL/ EXTERNAL CHARGING

The rechargeable flat top 21700 lithium-ion battery can be removed from the device.

To remove the battery, open the upper lid and unlatch the battery door compartment.

The battery may be charged with DaVinci's Fast Digital Charger when removed from the device.



IMPORTANT BATTERY WARNING

The IQ3 21700 lithium-ion battery may burn if mistreated.

To avoid explosion, fire, serious injury, environmental harm, short-circuits or malfunctions, follow these guidelines:

- Always store loose batteries in a protective cover.
- Never carry unprotected loose batteries on your body.
- Do not use if the battery wrapper is damaged.
- Do not use if there are any signs of corrosion.
- Do not disassembled or short circuit.
- Do not store your IQ3 or battery near heat sources.
- Do not use your IQ3 if it is unusually hot to the touch.
- Only use the DaVinci flat top 21700 battery.
- Always dispose of lithium-ion batteries in accordance with local requirements.
- Never dispose of battery in fire or water.

DaVinci is not responsible for any damage and/or injury caused by the use, misuse or mishandling of rechargeable batteries.

ZIRCONIA "FLAVOR CHAMBER" & VAPOR PATH

The IQ3's sealed zirconia/glass Vapor Path helps cool your vapor and provides purity for every session.

The Flavor Chamber can be used to augment the vapor flavor by adding more herbs or other aromatic additions. Use the onboard Pick Tool to remove the Flavor Chamber for cleaning, filling or replacement.



ZIRCONIA COOL CORE

The Cool Core inserts into the Flavor Chamber and produces smoother hits by reducing vapor temperatures up to 50%. Made from Zirconia ceramic, the Cool Core can be chilled or frozen for greater effect!





ZIRCONIA "PEARL" ADJUSTABLE SPACER

Twist the pearl to increase or decrease the oven chamber volume. To increase vapor density, adjust the pearl to ensure a tightly packed oven.

ON BOARD PICK TOOL

Located under the upper lid and along the inner wall, use the Pick Tool to stir or pack your herbs, remove Dosage Pods, Flavor Chamber, or Cool Core's.



STAINLESS STEEL HANDLED BRUSH

Use the included Stainless Steel Handled Brush to funnel herbs into the oven, lightly clean the oven after each use, tamp a freshly packed oven or Dosage Pod.



STAINLESS STEEL DOSAGE POD

The IQ3 includes two 0.3g Stainless Steel Dosage Pods for easy loading, dosage metering, and dual use.

For use with herb:

1. Twist the pod lid to open.
2. Tightly pack the pod with ground dry herb.
3. Twist the lid back onto the pod to seal.
4. Load the pod into IQ3's oven.

For use with extract:

1. Twist the pod lid to open
2. Pack the pod with herb or organic cotton to absorb overflow.
3. Insert a ceramic extract disc on the herb or cotton.
4. Put the desired amount of extract on the ceramic extract disc.
5. Twist the lid back onto the pod to seal.
6. Load the pod right side up into IQ3's oven

Helpful Tips

- Using extracts can result in heavy resin buildup. Use with Dosage Pods and regular cleaning are recommended for optimal performance.
- For heavy extract use, we recommend using the DaVinci Extract Kit.
- Always be cautious when removing Dosage Pods to avoid damaging the oven.
- To remove a Dosage Pod, allow it to cool for 1 minute and use the Pick Tool to pull the pod from the oven. If the pod is stuck, warm the oven and gently remove the pod. Clean the pod after each use.

WARNING

- Dosage Pods will be hot after each use.



EXTRACT KIT

Unlock your IQ3's dual-use functionality using the included Extract Kit & Stainless-Steel Dosage Pods.

Insert your choice of either a ceramic disc or cotton pad into your Dosage Pod, add your favorite extract on top of the cotton pad or disc, close the Dosage Pod, carefully put the pod into the oven, and enjoy!

We suggest setting your IQ3 to Smart Path 3 or higher for the best extraction experience.



ZIRCONIA MOUTHPIECE / 10 MM WATER TOOL ADAPTER

Your IQ3 comes fitted with a Zirconia Mouthpiece for discreet hygienic use. For use with DaVinci's Hydrotube or other water filtration systems, remove the mouthpiece and replace it with the Zirconia 10mm Water Tool Adapter.



CLEANING

To keep your IQ3 working optimally, we recommend regularly cleaning parts that encounter vapor using 70%+ isopropyl alcohol and/or water.

For Non-Removable Parts: Use a cotton swab dipped in 70%+ isopropyl alcohol to clean.

For Removable Parts: Soak the Mouthpiece, Flavor Chamber & its cap, and the 10mm Water Tool Adapter. Wipe the silicone Mouthpiece Gasket and the silicone Flavor Chamber Cap O-ring.

Ceramic parts may be soaked overnight; do not soak silicone parts for prolonged periods of time. Rinse removable parts with water and allow them to dry fully.

Do not submerge the device in liquid or use abrasive materials to clean the device, oven or vapor path as damage may occur.

Soakable Parts:



 **WARNING** 

1. Do not use IQ3 if it appears damaged, broken, or operating unusually.
2. This unit contains hot componentry. Use extreme caution to avoid burns.
3. Keep your IQ3 out of reach of children and pets.
4. Do not submerge in liquid.
5. Only use DaVinci-approved batteries in the IQ3. This product contains lithium-ion batteries. All rechargeable batteries have inherent risks under any circumstances. Use caution with lithium-ion batteries as they have dangerous charging characteristics and are known to explode or burn if mishandled. A purchaser and user of rechargeable batteries should educate themselves on rechargeable batteries, especially for charging, discharging, assembly, and storage. DaVinci is not responsible for any damage and/or injury caused by the use, misuse, or mishandling of the product or rechargeable batteries.

DISCLAIMER

DaVinci is not responsible for any damage and/or injury caused by the use, misuse, or mishandling of the product or rechargeable batteries.

IQ3 is not a medical device and is not regulated by the FDA. All medical diagnoses should be treated as instructed by a medical physician.

Dosage calculations are based on the standard use of IQ3. Actual measurement may vary based on outside variables.

Dosage should be used as a guide for compounds released by the IQ3, not for determining actual amounts of compounds absorbed. DaVinci dosage should not be substituted for professional, medical, or caretaker supervision. DaVinci dosage should not be substituted for the better judgment of the user.

This device is intended to be used for aromatherapy purposes in accordance with local law.

10 YEAR LIMITED WARRANTY

DaVinci warrants the IQ3 (not its accessories) against defects in materials and workmanship under normal use for a period of ten (10) years from the date of retail purchase by the original end-user purchaser with proof of purchase. If a physical defect arises and a claim is received within the warranty period, at its option and to the extent permitted by law, DaVinci will either (1) Repair the product defect, or (2) Exchange the product with a product that is new or is a functionally equivalent product. Customer is responsible for bearing the cost of freight in order to receive warranty support.

The limited warranty does not apply to normal performance degradation of materials, wear and tear of hinges, mouthpiece or neglecting to adhere to cleaning instructions. Please contact the DaVinci support team for any customer service needs.

For expedited service, register your product and sign up for DaVinci's VIP Customer Service Program.

For full warranty details visit:

davincivaporizer.com/warranty-information

EXPLORE IQ3

- Shop IQ3 Accessories
- Browse IQ3 "How-To" Videos
- Register your IQ3
- Read International IQ3 Owners Manuals
- Contact Customer Support
- Follow DaVinci on Social Media

